

CHM-5606A


5.6" TFT LCD

Swivelable Headrest Monitor




INSTRUCTION MANUAL

APPEARANCE

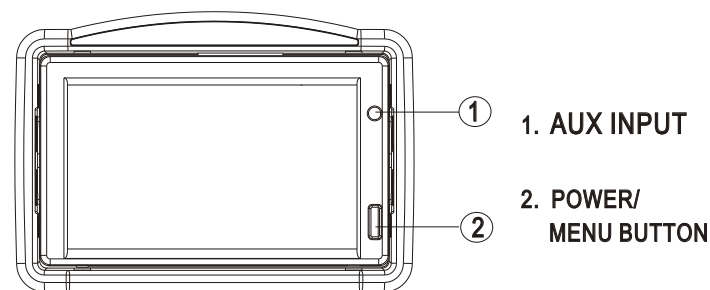

ATTACHMENTS


REMOTE CONTROL

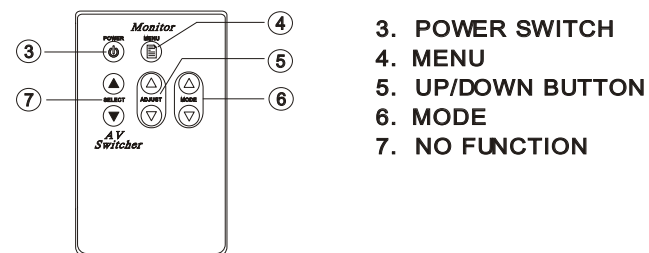


— 1 —

CABLES

- CABLE : "P/N : 55-1500-0310"
Length : 150cm




- CABLE : "P/N : 55-3000-0505"
Length : 300cm

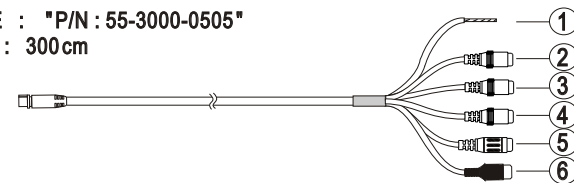

- 1.No Work(Orange Wire)
- 2.Audio/R Input(Red RCA Jack)
- 3.Audio/L Input(White RCA Jack)
- 4.Video Input(Yellow RCA Jack)
- 5.IR DATA Output(Black Phone Jack)
- 6.DC Input(Black DC Jack)

- 4 POLES CABLE FOR AV INPUT : "P/N : 55-1500-A501"
Length : 150cm



— 4 —

FUNCTIONS

PICTURE ADJUSTMENT

■ BRIGHTNESS

Press Δ or ∇ on the monitor directly or ADJUST key Δ / ∇ on the remote controller to adjust brightness.



■ COLOR / CONTRAST / TINT

To press \square on the monitor or MENU key \square on the remote controller, the screen will appear COLOR/CONTRAST/TINT/TRANSMITTER FREQUENCY /DIMMER/REVERSE adjustment item in turn.
At that time, Press Δ / ∇ on the monitor or ADJUST key Δ / ∇ on the remote controller to adjust the picture quality.



— 2 —

SPECIFICATION

DISPLAY RESOLUTION	5.6" Color TFT LCD (16:9) 1440(H) x 234(V) Total 336,960 dots
BACK LIGHT	CCFL
LAMP LIFE	20,000 hr min. (at Tamb =25 °C)
INPUT SIGNAL	NTSC & PAL (auto-switch)
POWER SOURCE	DC 12V \pm 15% (ripple 0.5 Vp-p max.)
RANGE OF OPERATING VOLTAGE	DC 12V \pm 15%
POWER CONSUMPTION	9W max.
CONTRAST RATIO	TYP. 150
BRIGHTNESS	TYP. 280 cd/m ²
VIEWING ANGLE	TOP 35 deg.(TYP) BOTTOM 15 deg.(TYP) LEFT/RIGHT 50 deg.(TYP)
OPERATING TEMPERATURE	0 °C ~ 60 °C
STORAGE TEMPERATURE	-30 °C ~ 80 °C
OPERATING HUMIDITY	85% RH max.
STORAGE HUMIDITY	85% RH max.
FREQUENCY OF IR HEADPHONE TRANSMITTER (2 CHANNELS)	fR : 2.8 MHz fL : 2.3 MHz & fR : 3.8 MHz fL : 3.2 MHz
OVERALL DIMENSIONS	169.12(W) x 118.73(H) x 32(D)
WEIGHT	352 \pm 10g

— 5 —

OPERATION

■ IR TRM. FREQUENCY/DIMMER/REVERSE/MODE

To press \square on the monitor or MENU key \square on the remote controller, the screen will appear COLOR/CONTRAST/TINT/TRANSMITTER FREQUENCY/DIMMER/REVERSE/MODE adjustment item in turn.
At that time, Press Δ / ∇ on the monitor or ADJUST key Δ / ∇ on the remote controller for adjustment.



Press UP/DOWN to select IR Transmitter Frequency(2.3/2.8or 3.2/3.8 MHz).



Press UP/DOWN to adjust Dimmer function




Press UP button for to switch Horizontal reverse,
Press Down button for to switch Vertical reverse .



Press UP/DOWN to for to select FULL/NORMAL/WIDE display mode.

— 3 —

DIMENSION

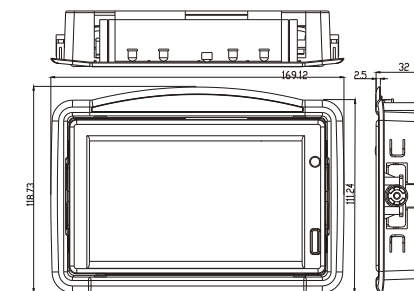

CAUTION

1. Don't expose to direct sunlight. (refer to specification)
2. Don't expose temperature extremes. (refer to specification)
3. Avoid dropping and strong impact.
4. Avoid wet and dust.
5. Never attempt to take apart and maintain by yourself

— 6 —